

RTU-250WM

Instruction for the installation





Step one: installation for handbar unit

1. Take out the ATV from carton, make removed from the top part of the carton away.


2. Take out ① and ②, set ② on ③, then fix ① on ③ clockwise/counter-clockwise.

3. Take down ④ from ⑤, fix ④ on ⑥ by ⑦.

Attention:

①, ② and ④ must be fixed as the middle of ③.

NO	Name	Specification	Quantity	Remark
①	Handbar clip		2	In the standard hardware bag
②	Handbar clip seat		1	In the standard hardware bag
③	Steering stem		1	In the ATV
④	Hand bar		1	In the ATV
⑤	Bolt	M8 × 55	4	In the standard hardware bag
⑥	Meter		1	In the ATV
⑦	Bolt	M8 × 16	2	On ③

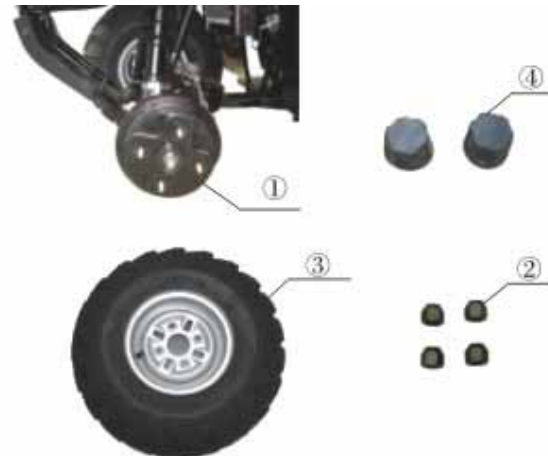

Step two: installation for front wheels

1. Take down ②, insert the wheel's attachment direction is consistent with the ATV's running direction, besides, valves are outward.

2. Fix ③ on ① by ②.


3. Insert ④ on ①.

4. The step of assembling left and right side is the same.

Attention:

Fix the tightest ② on the cross, then tighten evenly, after the installation, check the fastness, ④ must be firm.


NO	Name	Specification	Quantity	Remark
①	Hub, front wheel		2	In the ATV
②	Nut	M10 × 1.25	8	On ①
③	Front wheel	23 × 7-10	2	In the carton
④	Bush		2	In the standard hardware bag

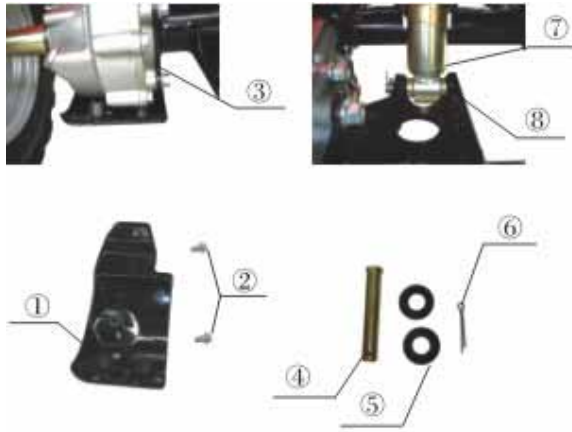

NO	Name	Specification	Quantity	Remark
①	Rear bridge cover		1	In the carton
②	Bolt	M8 x 16	2	In the standard hardware bag
③	Rear bridge		1	In the ATV
④	Roller shaft		1	In the standard hardware bag
⑤	Washer		2	In the standard hardware bag
⑥	Pin, cotter	φ2.5 x 30	1	In the standard hardware bag
⑦	Rear shock absorber		1	In the ATV
⑧	Install hole of rear shock absorber		1	On the Rear bridge

Step three: installation for rear shaft

1. Take out (1), then fix (1) on the (3) by (2).
2. Take out (4) and fix it on the (7) of the whole ATV from rear, attach (5) to the two ends of (4) and the (7) by (6) position, insert (4) from left to right, and insert (6) then split it.

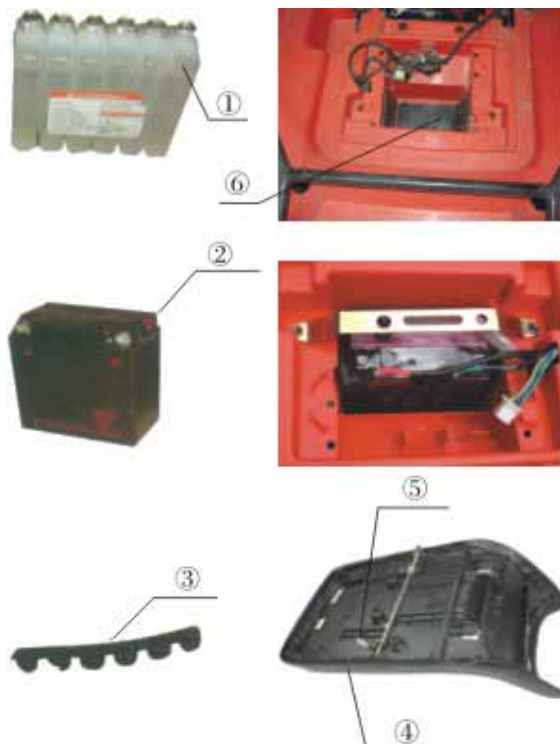

Step four: installation for battery and seat

1. Take out (1), 2. Take down (6) and fix into (2).
2. Put (1) into (2) battery electrolyte to the installation position of (1).
3. Put back (2) into the ATV, which includes positive and negative lead, the battery cable, includes red and black and green cable, please be noted that the red cable should be connected with the positive lead, while green cable with negative lead when connecting.
4. Take up (3) by handle, clasp (3) by a hook, press down (6) by strap bag to fix it.

Attention:

Don't operate (1) and (2) if you please, it will be dangerous.

NO	Name	Specification	Quantity	Remarks
①	Battery electrolyte		1	In the carton
②	Battery		1	In the ATV
③	Plug		1	On the battery
④	Seat		1	In the ATV
⑤	Seat lock		1	On the seat
⑥	Battery box		1	In the ATV